
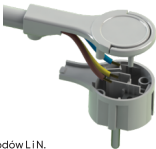


ORNO

INSTRUKCJA PODŁĄCZENIA OR-AE-1379

250V~, 16A,
maks. 3680W

Wszelkie czynności wykonuj przy odłączonym zasilaniu. Samodzielny montaż i uruchomienie urządzenia jest możliwe pod warunkiem posiadania przez montażystę podstawowej wiedzy z zakresu elektryki i używania odpowiednich narzędzi. Producent nie odpowiada za uszkodzenia mogące wynikać z nieprawidłowego montażu czy eksploatacji urządzenia. Dokonywanie samodzielnych napraw i modyfikacji skutkuje utratą gwarancji.

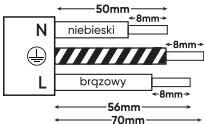



1. Przewód uziemienia powinien być dłuższy od przewodów L i N.
2. Urządzenie przeznaczone do kabla H05VV-F: 3G1mm² lub 3G1,5mm².
3. W przypadku kabla o średnicy powyżej 8mm należy zastosować wewnątrz śrubę 6mm.

ORNO

WIRING INSTRUCTIONS OR-AE-1379

250V~, 16A, max. 3680W

Perform all operations with the power supply disconnected. Self-assembly and set-up of the device is possible provided that the assembler has the basic knowledge of electrical engineering and the use of appropriate tools. The manufacturer is not responsible for any damage that may occur due to improper installation or operation of the device. Making any repairs or modifications on your own will result in loss of warranty.

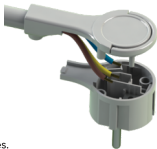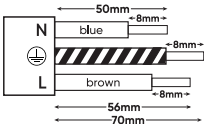

1. The earth wire should be longer than the L and N wires.
2. The device is designed for H05VV-F: 3G1mm² or 3G1,5mm² cable.
3. For cable diameter over 8mm, use 6mm screw inside.